

Do one of the following:

- Hang up the handset.
- If you are using the speakerphone, press the Speaker button again.
- If you are using a headset, press the main headset button, or press the Headset button on the phone.