

System Speed Dial

Last Modified on 01/26/2018 11:19 am EST

Your iPECS administrator may create system speed dials that are available all AiPECS las users. (Your administrator may also create [group speed dials](#) that are available to all members of a group, and you can create [station speed dials](#) yourself that are local to your phone only.)

Dial a system speed dial

- Press the [programmable feature button](#) for the system speed dial, if one is present on your phone.