

Speakerphone Button

Last Modified on 01/24/2018 4:52 pm EST

Press the Speakerphone button to toggle between speakerphone mode and handset/headset mode, whichever you are currently using.



Use the Up and Down volume buttons to adjust ring, handset, and speakerphone volume.

