

# Adjust Volume

Last Modified on 01/24/2018 4:52 pm EST

Use the Volume - and Volume + toggle button to adjust volume settings:

- Handset volume
- Headset volume
- Speakerphone volume
- Ringer volume