

Modify Ringtone

Last Modified on 08/17/2018 10:09 am EDT

You can set a different ring tone for internal (Intercom) and external (Trunk) calls. Follow the instructions for your phone model.

You can also [download additional ringtones](#) .

iPECS 9x20 and 9x30 phones:

Select the ringtone for **internal** calls

1. Press the **Menu** button.
2. Press **2** (Ring).
3. Press **1** to select **Intercom Ring Type**. This is the option for internal calls.
4. Press **1** to select **Keypad Ring Source**. This is the source of the ringtones available on your phone.
5. Use the directional buttons to scroll through the list until you find the ringtone that you want to use. The highlighted ringtone plays automatically.
6. Press **OK** to set the ring tone.
7. Press **Back** to return to the previous screen. Press **Exit** to exit Menu.

Select the ringtone for **external** calls

1. Press the **Menu** button.
2. Press **2** (Ring).
3. Press **1** to select **Trunk Ring Type**. This is the option for external calls.
4. Press **1** to select **Keypad Ring Source**. This is the source of the ringtones available on your phone.
5. Use the directional buttons to scroll through the list until you find the ringtone that you want to use. The highlighted ringtone plays automatically.
6. Press **OK** to set the ring tone.
7. Press **Back** to return to the previous screen. Press **Exit** to exit Menu.

iPECS 9x02 phones:

Select the ringtone for **internal** calls

1. Press the **Transfer** button.
2. Press **2** (Ring).
3. Press **1** to select **Intercom Ring Type**. This is the option for internal calls.
4. Press **1** to select **Keypad Ring Source**. This is the source of the ringtones available on your phone.
5. Use the **Volume +** and **-** buttons to scroll through the list until you find the ringtone that you want to use. The highlighted ringtone plays automatically.
6. Press the **Hold** button to set the ring tone.
7. Lift and replace the handset to exit.

Select the ringtone for **external** calls

1. Press the **Transfer** button.
2. Press **2** (Ring).
3. Press **1** to select **Trunk Ring Type**. This is the option for external calls.
4. Press **1** to select **Keypad Ring Source**. This is the source of the ringtones available on your phone.
5. Use the **Volume +** and **-** buttons to scroll through the list until you find the ringtone that you want to use. The highlighted ringtone plays automatically.
6. Press the **Hold** button to set the ring tone.
7. Lift and replace the handset to exit.